


## **ICEFAB MESH INSTALLATION INSTRUCTIONS**

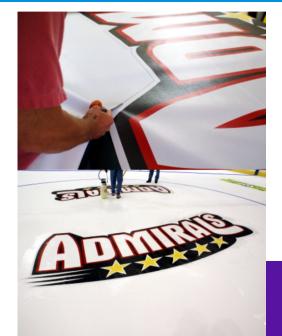

IF NEEDED,
TRIM LOGO USING A PAIR OF SCISSORS.

LAY LOGO IN DESIRED LOCATION AND LEAVE
IN PLACE UNTIL MATERIAL REACHES ICE SURFACE
TEMPERATURE.

(APPROX. 15 - 20 MINUTES)

## DO NOT FLOOD - FLOODING WILL CAUSE MATERIAL TO FLOAT



USING A SPAY BOTTLE (HUDDIE)
APPLY A LIGHT MIST COAT OF WATER OVER LOGO.

USE A PAINT ROLLER TO FORCE THE WATER BETWEEN THE MESH AND TO REMOVE ANY AIR POCKETS.

LET FIRST COAT OF MIST FREEZE AND REPEAT.
REPEAT THIS PROCESS UNTIL THE MATERIAL IS
INCASED IN ICE.

NOTE: ALLOW EACH COAT OF MIST TO FREEZE.

ONCE LOGO IS COMPLETELY FROZEN AND COVERED WITH A THIN COAT OF ICE, NORMAL FLOODING CAN BEGIN.

